


Contents

- General Information
- Intended Use
- Assembly
- Cleaning
- Warnings

General Information

- The grid anchor and the integrated connecting elements are weatherproof (rust-resistant), UV-stable, and withstand temperatures up to 60 °C.
- **All screws should be tightened with care and no tighter than necessary (only "hand-tight").**

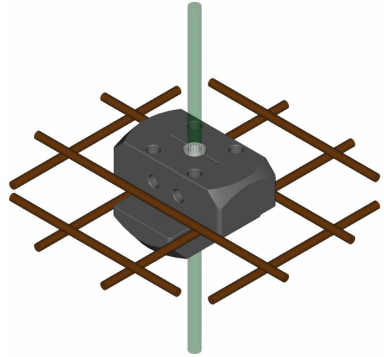

- The grid anchor is made of plastic. This material may "settle" over time, which might require the screws to be retightened.
- The upper and lower parts of the grid anchor contain hollow spaces. Therefore, they do not sink to the bottom but float on the water's surface. However, these hollow spaces may fill with water over the years. If there is a risk of frost, the grid anchor should be removed from the water.

Intended Use


Fountains, small ponds, and other water features are often covered with welded wire mesh (positioned below the water surface) for protection. The grid anchors are used to secure SunForms (or other decorative objects) to the welded wire mesh safely, stably, and inconspicuously.

The swinging rod can be clamped at any height using the grid anchor. However, to avoid excessive bending forces on the anchor and the welded joints of the mesh, the height should be kept as low as possible.



Assembly

You will need a Phillips screwdriver for assembly.

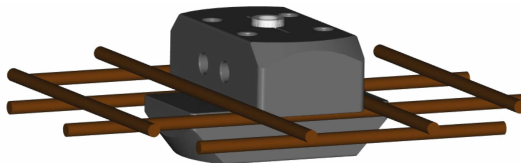

- First, loosen the 4 vertical screws.
 - Push the lower part of the anchor through the grid and position it (with the conical recess facing upward) between two of the lower grid bars.
 - Place the upper part (rotated by 90° relative to the lower part) between two of the upper grid bars and screw the two parts back together.
-
- Now, slightly loosen the lateral (horizontal) clamping screws and slide the rod of the SunForm through the transparent sleeve. If the fountain or pond is currently drained, the rod should be moistened separately for this step.
 - Tighten the screws evenly until the rod is clamped sufficiently tight.

Cleaning



- Clean the grid anchor with warm water and dishwashing liquid.
- In stubborn cases, rubbing alcohol (methylated spirits) or lighter fluid (cleaning petroleum) can also be used.

What you should avoid:



- Aceton attacks the surface of the grid anchor.
- Do not use a high-pressure washer.

Warnings



Grid anchors are not suitable as toys for children under 3 years of age.
The article contains small parts that can be swallowed.