



Cleaning



- You can just rinse off pollen, sand, and dust with some water (from a hose or watering can).
- For stubborn dirt, use a lint-free cloth or a soft sponge with plenty of water and a light touch.
- To get rid of really tough grime, use warm water and a bit of regular dish soap.



Stuff you should avoid:

- Don't rub your SunForm dry.
- Don't use any abrasive cleaners.
- Glass cleaners, solvents, and alcohol can damage the surface.
- Don't use a pressure washer.

More info

... can be downloaded from the service area of the SunForm shop (www.sunform.shop/service/).

- Setup & Positioning
- Cleaning & Care
- Tips & Tricks


Safety warnings



SunForms aren't toys and aren't suitable for kids under 3.
The mounting kit might contain small parts - **choking hazard**.

If you use brute force (like bending it too much or hitting it hard), the plastic discs might break or splinter. Broken edges can be sharp or pointy and might cause cuts or stabs if you're not careful.

In that case, please wear proper gear (like safety goggles and gloves).

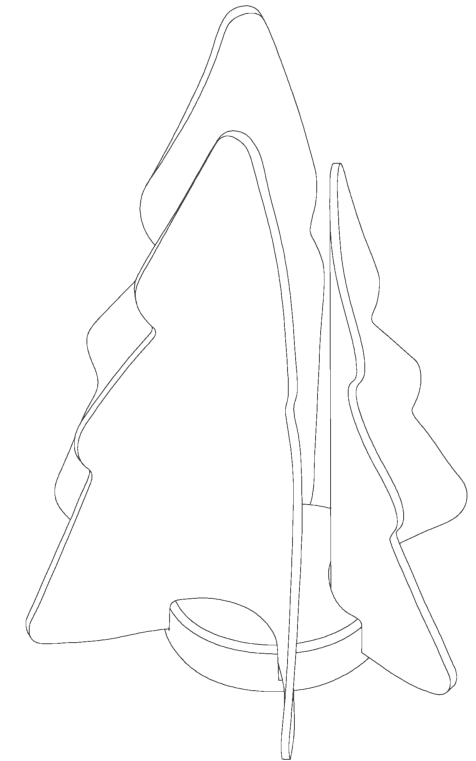

Content

- What's in the box
- General tips
- Assembly guide
- Warming up the segments
- Cleaning
- More info
- Safety warnings

What's in the box

- 3x Tree segments (3 different sizes)
- 1x Trunk
- 1x Assembly guide

General tips

- The pieces come with a protective film. We might have already peeled it off for quality checks or if the pieces are frosted, engraved, or coated.
- This tree is strictly for indoors, so please don't use it outside. If water keeps getting into the slots of the trunk, it won't dry properly and will end up damaging the wood.
- **To keep the film from tearing on delicate engravings or thin edges, please peel it off nice and slow.**
- The discs are heated up to be bent into shape. This can cause some bubbles to form under the protective film. Don't worry, though—those bubbles disappear when you peel off the film and don't affect the quality of the discs at all.

Assembly Guide

To put your SunForm together, you'll need:





a cooking pot
(about 20 cm wide).

1.

First, peel the protective film off the three tree segments.

2.

Boil some water in the pot, then turn off the stove. Wait a moment until it stops bubbling and drop the three segments in (just like shown on the right).

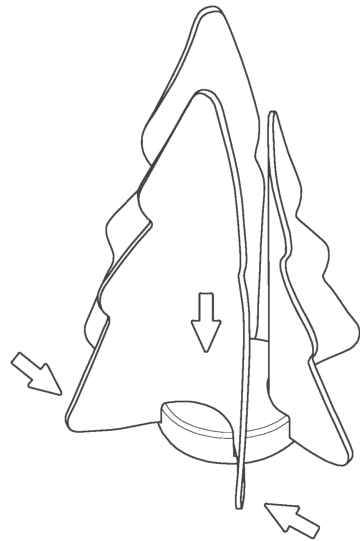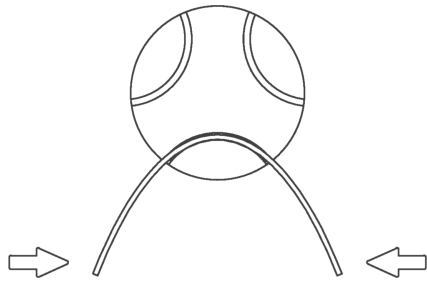

3.


Lay the trunk on the table with the slots facing up. Now, slide the three segments vertically into the slots. The curve of the segments is a tiny bit wider than the slots, so just give them a light squeeze at the bottom to fit them in. Once you let go, they'll expand and lock firmly into place.

Warming up the segments

The tree segments are made of acrylic. This stuff is pretty flexible and can handle a bit of bending, but it can snap if you overdo it. As long as you don't bend it more than what's needed for the slots, you'll be fine. Just don't push it too far, or the material might give way.

The segments are shaped by hand. Since these are handmade, there's always a bit more variation compared to machine-made parts, which obviously includes the curve of the segments.

To make sure nothing breaks, you should warm up the area you're bending to about 60°C first.

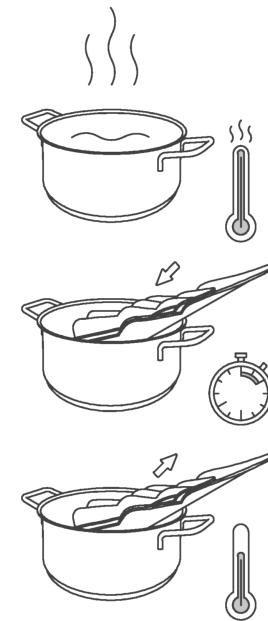

- Fill the pot with about 6-8 cm of water and bring it to a boil—or just use a kettle and pour the hot water in. Turn off the heat and wait a bit until the water stops bubbling.
- Now, put the three segments in the pot (like shown—with the part that needs bending facing down).
- After about 10 minutes, take them out one by one, dry them off with a kitchen towel, and slide them into the trunk (just like we explained in step 3).